



ELECTRIC HEIGHT ADJUSTABLE DESK

User Manual

Updated 19.1.2022



VISU KALUSTE OY

📍 Eeliksentie 6, 34870 Visuvesi, Finland

@ visu@visu.fi

☎ +358 44 749 4940

🌐 visu.fi

USING ELECTRIC HEIGHT ADJUSTABLE DESK

Electric desk systems are operated from a touch panel divided into control and memory functions. The two arrow buttons are used to adjust the height of the table. The remaining four buttons are for a memory function.

-  Up
-  Down
-  Save
-  Memory 1
-  Memory 2
-  Memory 3

Height adjustment

Press and hold the up or down button to set the desired height.

Saving the height position

Press the S button and then the desired memory button 1, 2 or 3.
To pause recording, wait 3 seconds.

Height adjustment to the saved position

Press the memory button 1, 2 or 3 and the system will return to the saved setting.
Press the button until the position is reached.

Desk calibration

Due to overload or some other unexpected reason, the desk may go into a fault mode and will not rise. The desk can be reset by calibrating it as follows:

Press the “Down” button until the desk is fully down and stopped. Release the button. Press the “Down” button again continuously for about 5-7 seconds.
The desk jerks slightly as it calibrates, after that the desk can be used normally.

Note. At the customer’s request the desk can have a pre-programmed lower height limitation. This height can be temporarily overridden by holding the “Down” button for 30-60 seconds.

Contact Visu Kaluste if the pre-programmed height limit needs to be changed permanently.